

# Dual

The **Dual** command pairs signals together when two signals are required from the panel. When the second signal doesn't arrive the system generates a "missing dual signal" alarm.



The screenshot shows a control panel interface for a 'Dual' command. The title bar reads 'Text' and 'Dual(0, \_\_, \_\_)'. Below the title bar, there are three icons: a red 'x', a green up arrow, and a blue down arrow. The main configuration area has three rows, each with a label, a value, and a menu icon (three dots):

Label	Value	Menu
ID	0	...
Tx No.	1	...
Type		...

## Command Parameters

- **ID** - Groups the signals together.
  - **Tx No.** - Lists which Transmitter upon which the signal arrives.
  - **Type** - Determines how the operation behaves with the dual signal.
    - **Primary** = The first expected signal.
    - **Secondary** = The backup signal.
    - **Dispatchable Secondary** = If only this signal arrives, the secondary signal can be managed as the primary.
-