


EntryExit (EntryType)

The **Entry Exit Delay** command allows delivery delay of alarms based on Entry or Exit into the property. This requires an Open/Close schedule and mapping of the zones included in the Entry and/or Exit delay. This also assigns a monitoring service to the account where this applies.

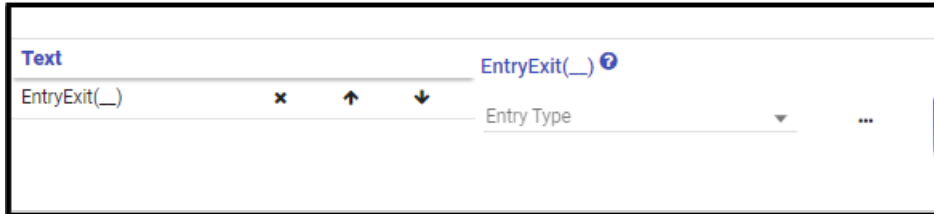

Command Parameters

- **Entry Type** - Determines how the event/zone participates in the Entry/Exit delay.
 - **1** = Zone Starts the Entry Cycle.
 - **2** = Zone is an intermediate signal in the process.
 - **3** = Starts an Entry Cycle if not already started, or is an intermediate signal.
 - **4** = Ends an Exit Cycle or is an intermediate signal.
 - **5** = Starts an Entry Cycle or Ends an Exit Cycle.
 - The most commonly used types are **1, 3, and 5.**
-