

New Customer Systems - Transmitter - Areas and Zones

The Areas and Zones step within the System add process allows you to enter the physical location details.

| Area | Zone | Description | Signal | Test Signals | Expected Signals |
|------|------|-------------|--------|--------------|------------------|
| ADD | | | | | |

Areas

Areas are a defined portion of the monitored location. Areas are also known as Partitions. In the absence of an area at most sites, Area 1 will be the default and we encourage the addition to the areas of your new transmitter.

| Area | Description | Schedule | Monitoring Type |
|------|-------------|----------------------|-----------------|
| 1 | Area 1 | No Schedule Selected | |

Zones

Zones are the physical location of the equipment at the monitored location. These are places you can direct a person to inspect the specific portion of the monitored location. Examples are Front Door, Back Door, Upstairs Pullstation, Entry Panic Button, etc.

Manitou allows you to import properly formatted data through a copy and paste feature. This is found by clicking the handshake (🤝) icon.

Add System
1 - System 1

SYSTEM TYS **AREAS & ZONES** PROGRAMMING DEVICES REMINDERS

Areas

| Area | Description | Schedule Selected | Monitoring Type |
|------|-------------|-------------------|-----------------|
| 1 | Area 1 | | |

ADD

Zones

| Area | Zone | Description | Test Signals | Expected Signals |
|------|------|-------------|--------------|------------------|
| | | | | |

ADD

CANCEL PREVIOUS NEXT

Import Data

Import data can accept either two or three tab-delimited inputs per line.

Format 1: Area ID Zone ID

Format 2: Area ID Zone ID Description

Paste Data Here

CANCEL DONE

Import Data

Import data can accept either two or three tab-delimited inputs per line.

Format 1: Area ID Zone ID

Format 2: Area ID Zone ID Description

| AREA | ZONE | DESCRIPTION |
|------|------|-------------------------|
| 1 | 1 | Front Door |
| 1 | 2 | Entry PIR |
| 1 | 3 | Vestibule |
| 1 | 4 | Front Desk Panic Button |
| 1 | 5 | Back Entry PIR |
| 1 | 6 | Back Entry Door |
| 1 | 7 | Back Yard Motion Camera |

CANCEL DONE

Add System
1 - System 1

SYSTEM TYS **AREAS & ZONES** PROGRAMMING DEVICES REMINDERS

Areas

| Area | Description | Schedule | Monitoring Type |
|------|-------------|----------------------|-----------------|
| 1 | Area 1 | No Schedule Selected | |

ADD

Zones

| Area | Zone | Description | Signal | Test Signals | Expected Signals |
|----------|------|-------------------------|--------|--------------|------------------|
| 1 - Area | 1 | Front Door | Signal | 0 | 0 |
| 1 - Area | 2 | Entry PIR | Signal | 0 | 0 |
| 1 - Area | 3 | Vestibule | Signal | 0 | 0 |
| 1 - Area | 4 | Front Desk Panic Button | Signal | 0 | 0 |
| 1 - Area | 5 | Back Entry PIR | Signal | 0 | 0 |
| 1 - Area | 6 | Back Entry Door | Signal | 0 | 0 |
| 1 - Area | 7 | Back Yard Motion Camera | Signal | 0 | 0 |

ADD

CANCEL PREVIOUS NEXT

When the Areas and Zones are entered as needed, click **Next**.
