

SIMS

SIMS III for Windows – Operator Access Levels


Remote Access Level:

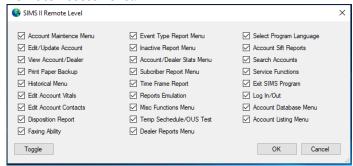

Web-Access Level:

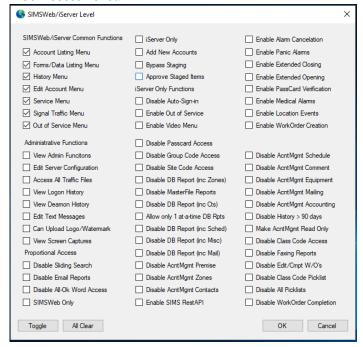

Apprentice Level:

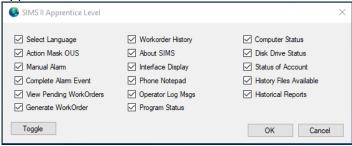




Additional Information:


 To add a new operator see the SIMS III for Windows – Adding a New Operator Quick Reference Guide.

SIMS III – Operator Access Levels (cont.)


Operator Level:

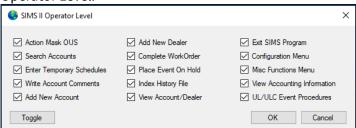

Supervisor Level:

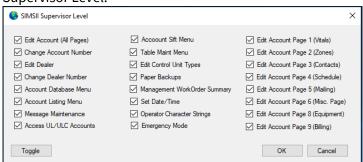

Master-Supervisor Level:

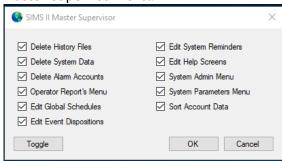

Management Level:

