## SIMS Receiver Server III – Auto Clear Events

Auto Clear Events can be found in SIMS Receiver Server III under Configure>Global Setup>Misc 2 tab. This option will allow the Event listed below to "remove" the opposing signal from traffic.





Below listed are the events that are handled by the Auto Clear Events option in SIMS Receiver Server III:

Event	Removes
LPR (Low Power Restore)	LPT (Low Power Trouble)
PON (Power On)	POF (Power Off)
BON (Battery On)	BOF (Battery Off)
LBR (Low Battery Restore)	LBT (Low Battery Trouble)
PRR (Power Restoral)	PRF (Power Fail)
TST (Test)	FTC (Fail to Communicate)
TST (Test)	NOT (Not Tested) *
PTS (Periodic Test Signal)	FTC (Fail to Communicate)
PTS (Periodic Test Signal)	NOT (Not Tested) *
OPN (Open)	LTO (Late to Open) *
EOP (Early Open)	LTO (Late to Open) *
LOP (Late Open)	LTO (Late to Open) *
CLO (Close)	LTC (Late to Close) *
ECL (Early Close)	LTC (Late to Close) *
LCL (Late Close)	LTC (Late to Close) *

\*SIMS Generated Events